


## 1. Preparation


Carefully clean the inside of the windscreen where the OBE is to be attached.  
Ensure that the surface is thoroughly clean and dry.

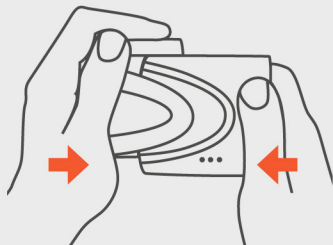

Attach the OBE.

## 2. Position.



Passenger  
Cars & Vans

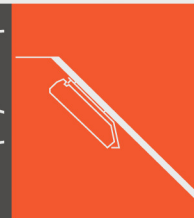

Inside Views.

Detail of Profiles.

Lorries  
Coaches

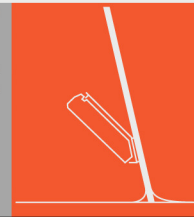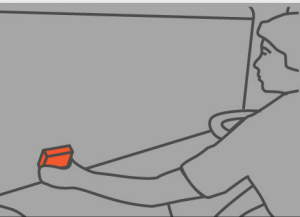


## 3. Adhesive.

Passenger  
Cars & Vans




Remove the protective backing from the adhesive that secures the OBE to the windscreen.

Lorries  
Coaches

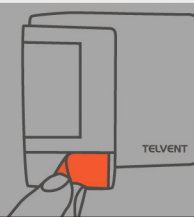

## 4. Attachment.

Passenger  
Cars & Vans

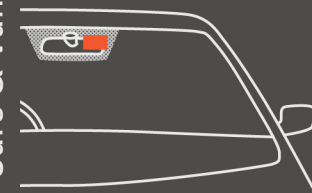

Attach the OBE preferably in the shaded area close to the rear-view mirror. Hold it in place for 15 seconds.

Lorries  
Coaches

